



NOTE:
 1: RESISTOR 120Ω IS INCLUDED IN THE KIT AND MUST ONLY BE USED IN FIRST OS AND LAST WATCH CALL. ONLY PIN 2 (CAN_L) AND PIN 7 (CAN_H) IN USE.

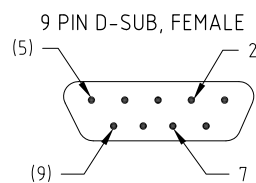

2: INTERNAL POWER OF BUZZER REQUIRES KM CURRENT BUZZER (700632). IF POWER BUZZER ARE USED (>250mA), EXTERNAL POWER SHOULD BE USED.

Rev.	Date	Description	Designed by	Checked by	Approved by
A	29.09.10	First Issue	AS	EK	PGE
 Kongsberg Maritime AS Automation Kongsberg			Title CanBus Net Watch Call Connection		Sheet 1/1 Size A3 Scale -
Project / Product name K-Chief		Project number Basis	Drawing type Wiring Diagram		
The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of grant of a patent, utility model or design. © Kongsberg Maritime					Document ID 351742 Revision A