




11.3 Overview MPC connections

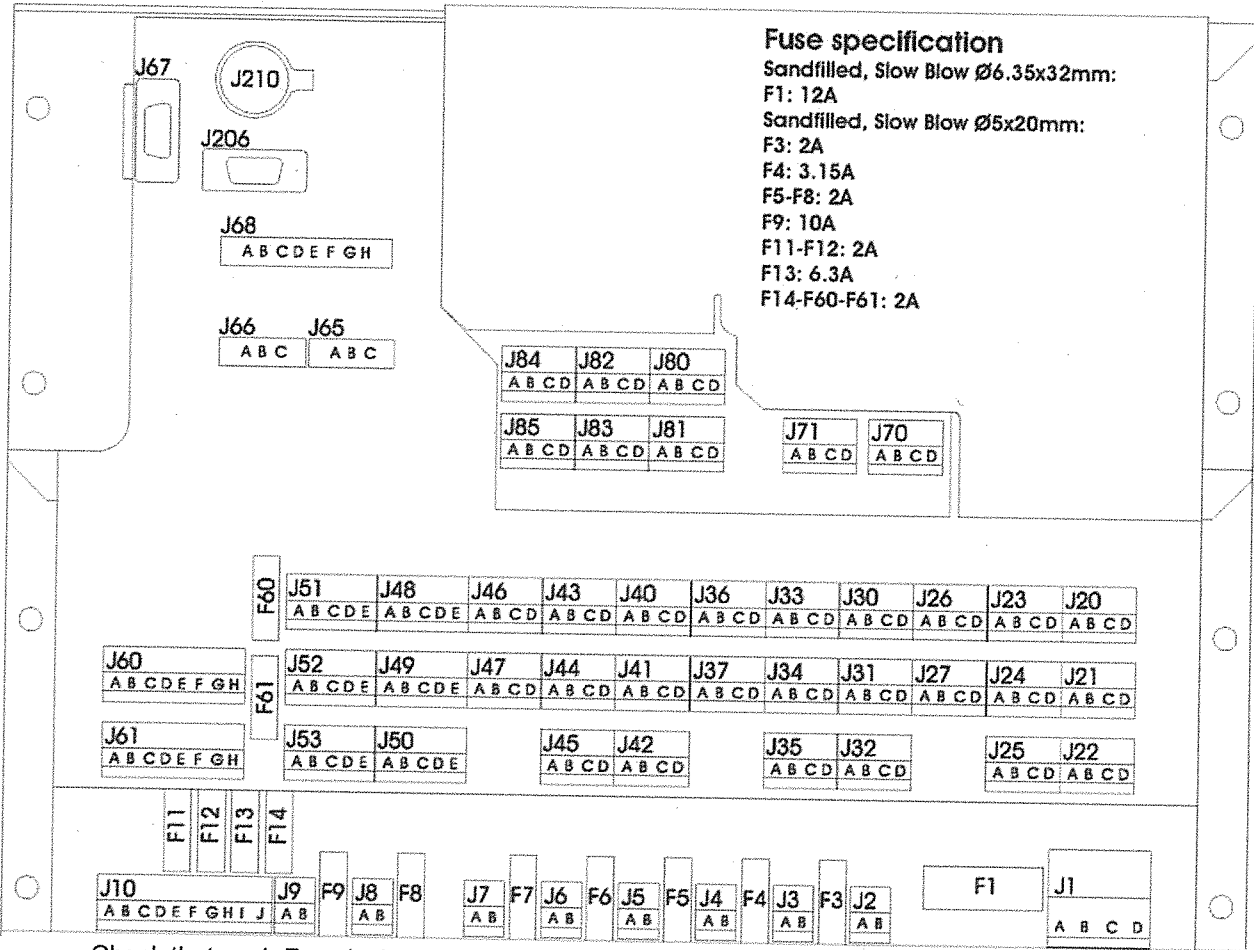

- Check that each Fuse is the specified type.

Overview J- plugs and fuse on MPC:

J-plug number	Fuse No.	Function of fuse
1	F-1	Powersupply
2	F-11	Powerfailure
3-9	F-3 to F-9	Power Out 24V
10		Connecting terminals (Loop etc.)
20-37	F12	Analog In
40-47	F-13	Fast Digital In(Galv. Isolated)
48-53	F-13	Fast Digital In/out(Galv. Isolated)
60-61	F-13	Digital Out(Galv. Isolated)
65-66		Network connections
67		Service terminal
70-71	F-14	Analog Out(Galv. Isolated)
80-85		Digital Out(Galv. Isolated)
206		Dongle Key connect
210		Battery