

# **CONTROL VALVES**


## **STC Valves / PCV Valves**

### **Main purposes**


---

- I     START AND STOP OF THE CARGO PUMP**
- II    PREVENT OVERSPEED**
- III   CONSTANT TORQUE CONTROLLER**


Pump remote control  
assembly

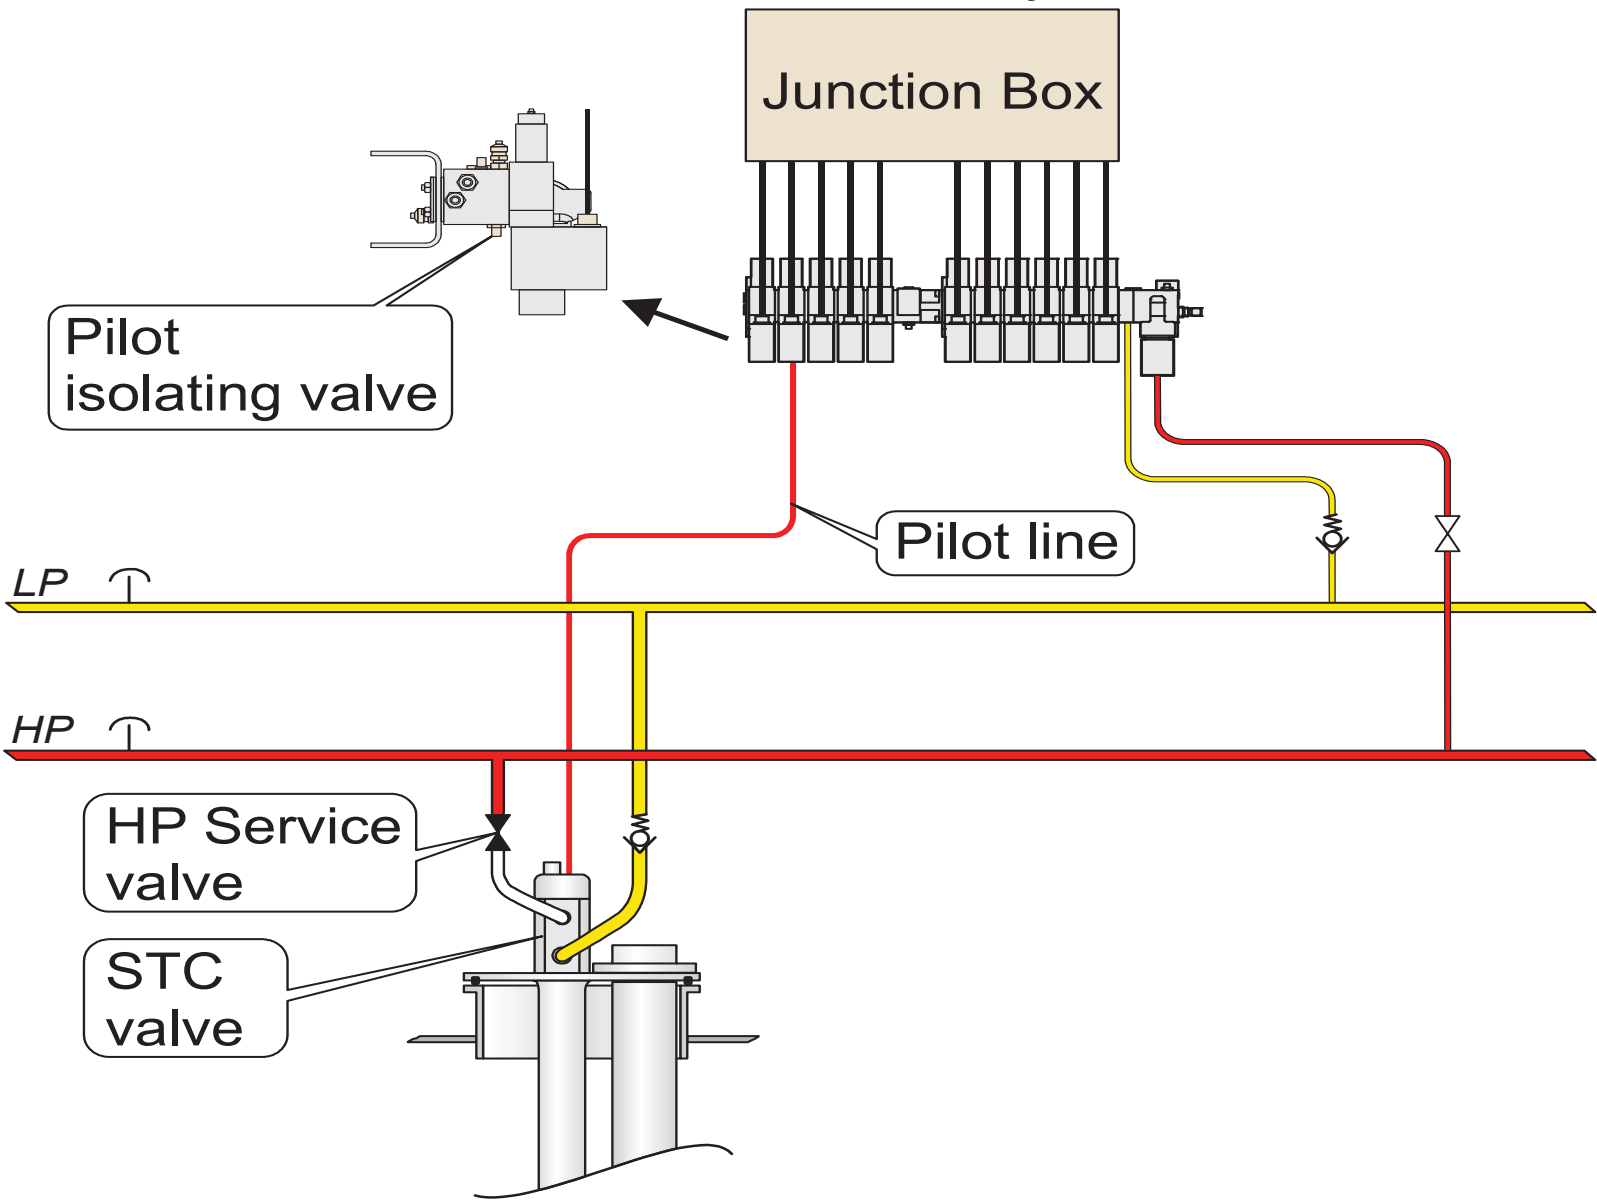


## Speed Torque Control Valve

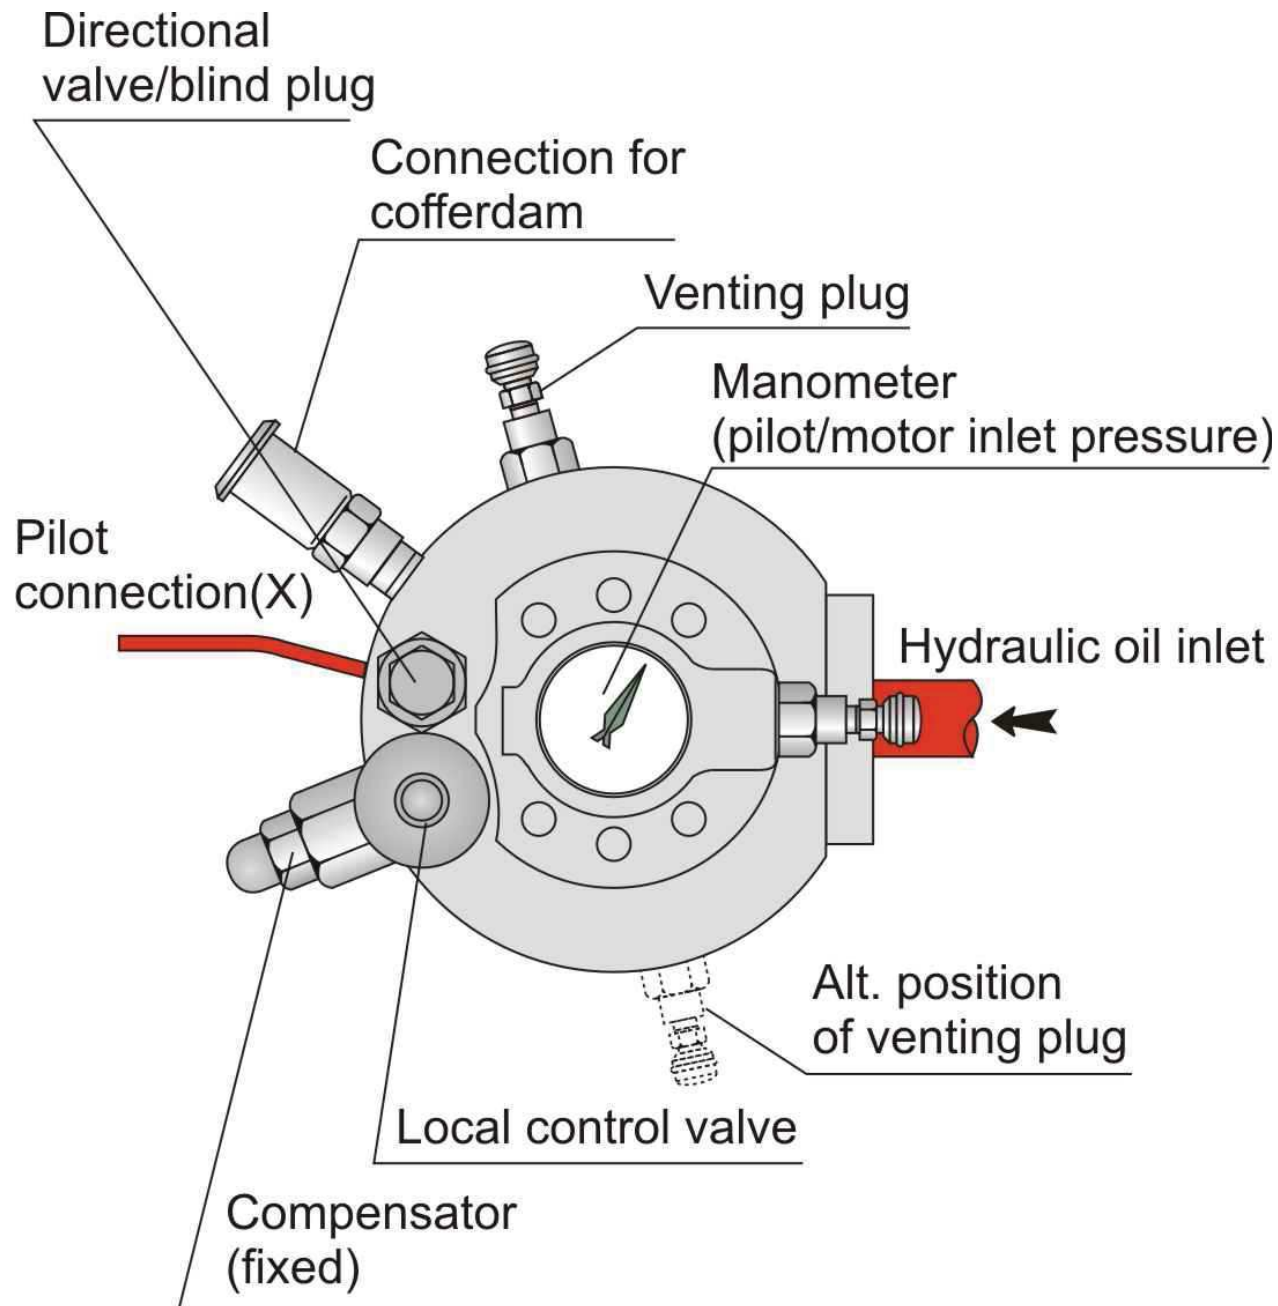


# Speed Torque Control Valve

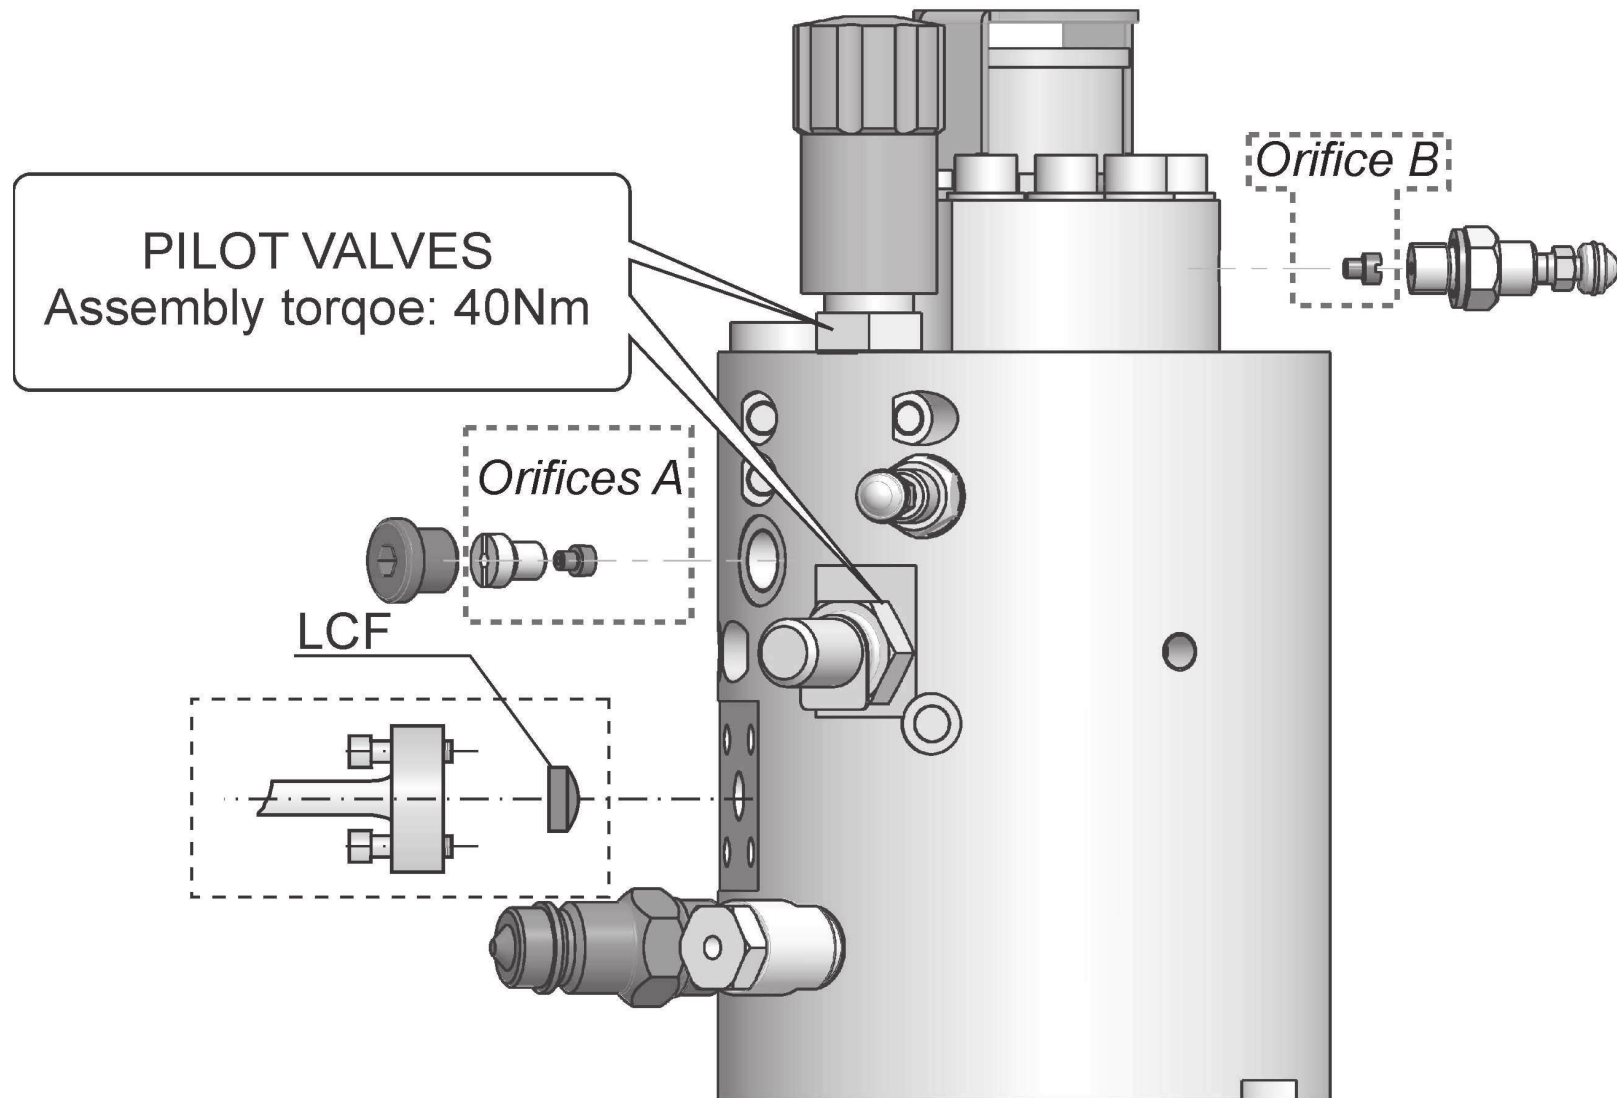

# Speed Torque Control Valve

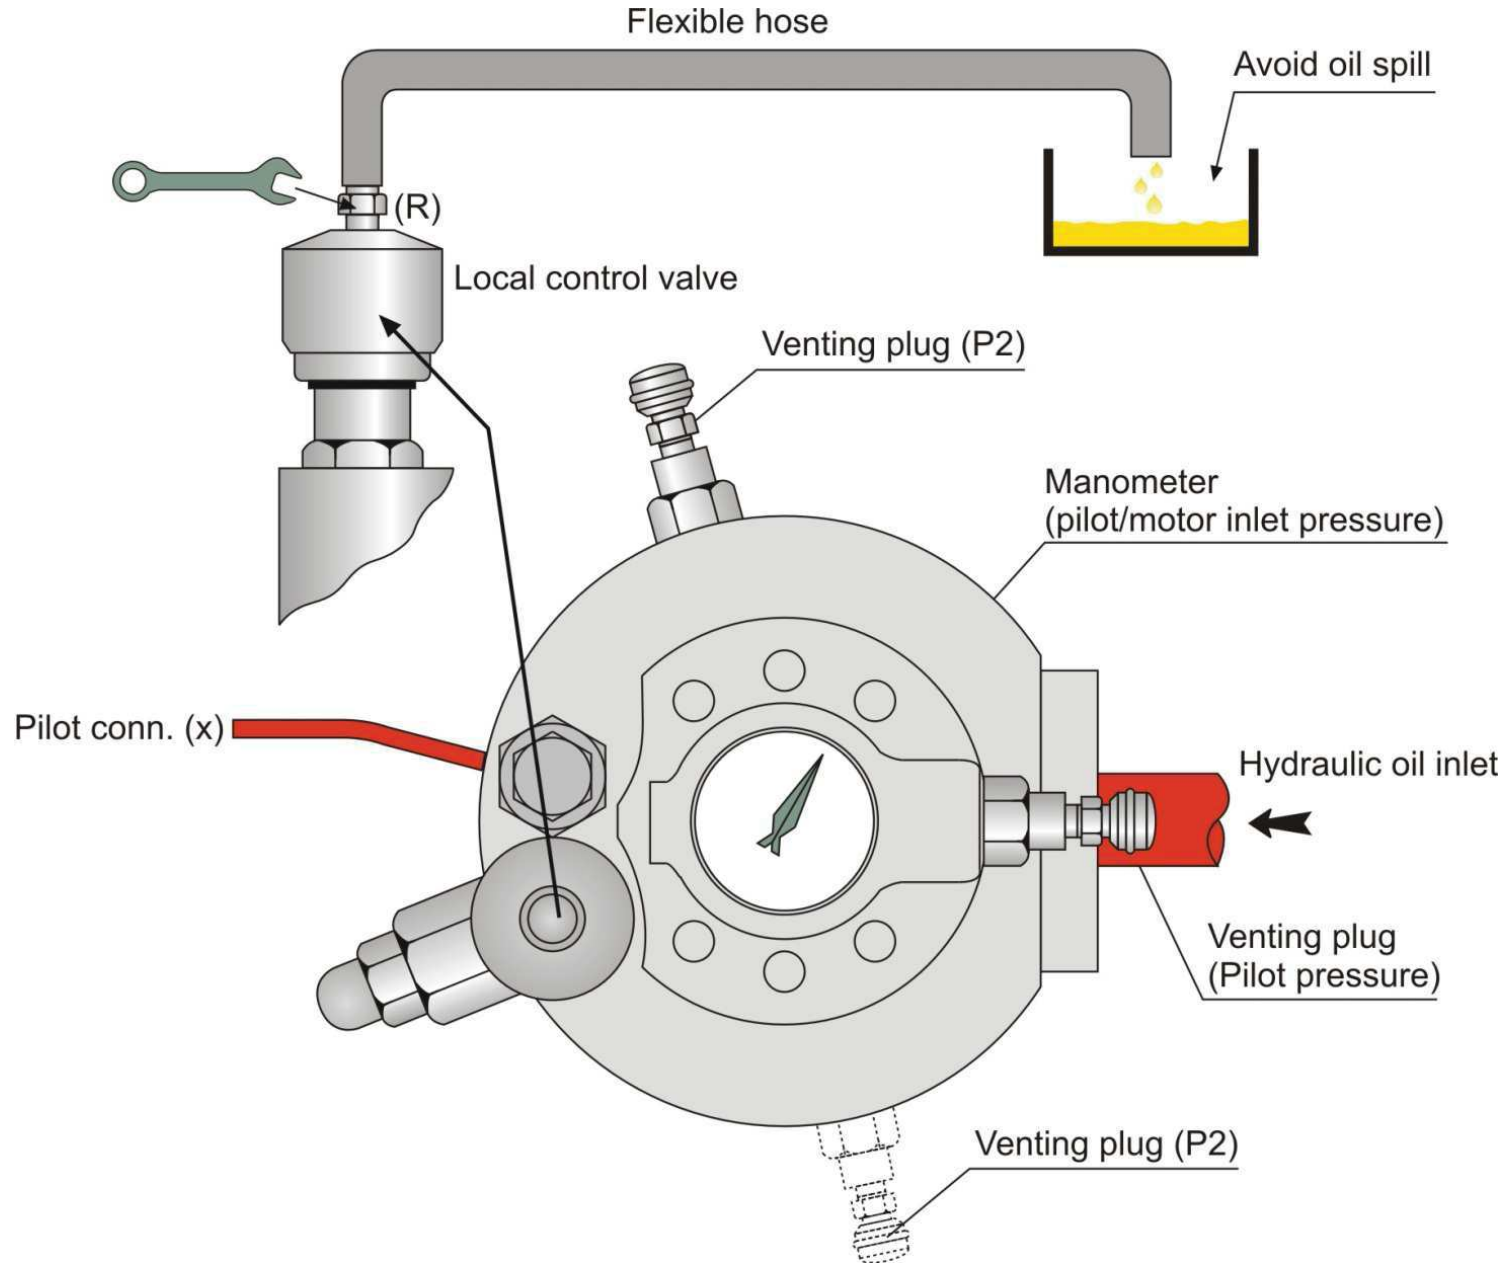

# Speed Torque Control Valve, STC-25

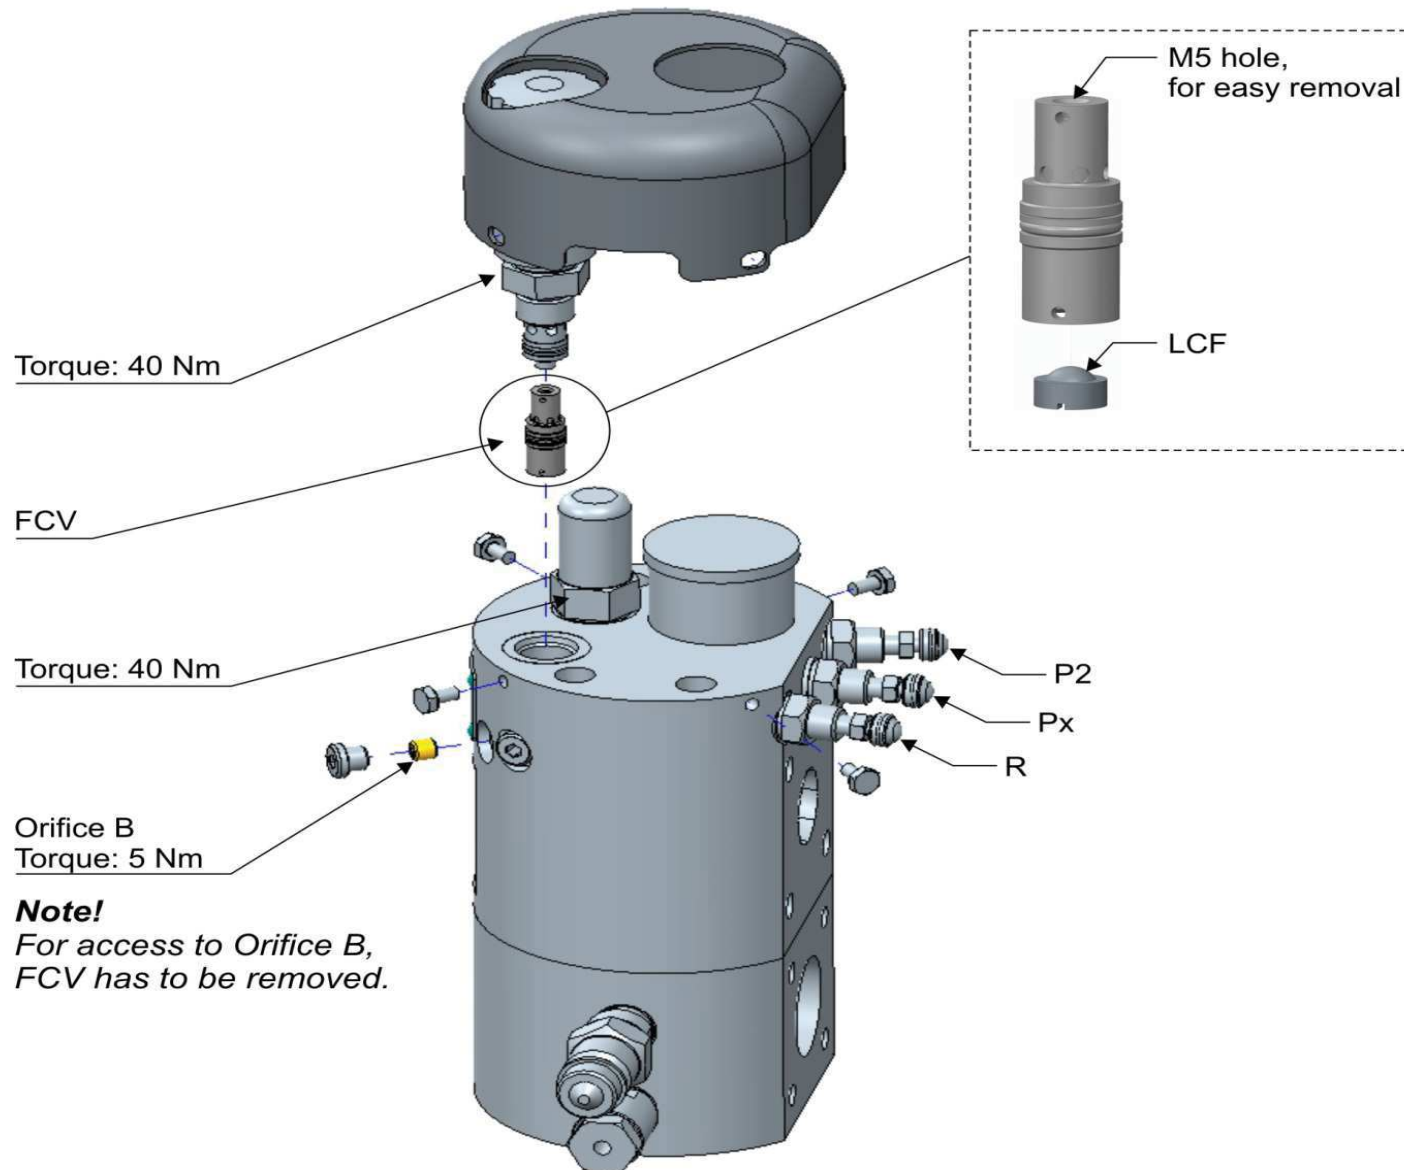

STC

