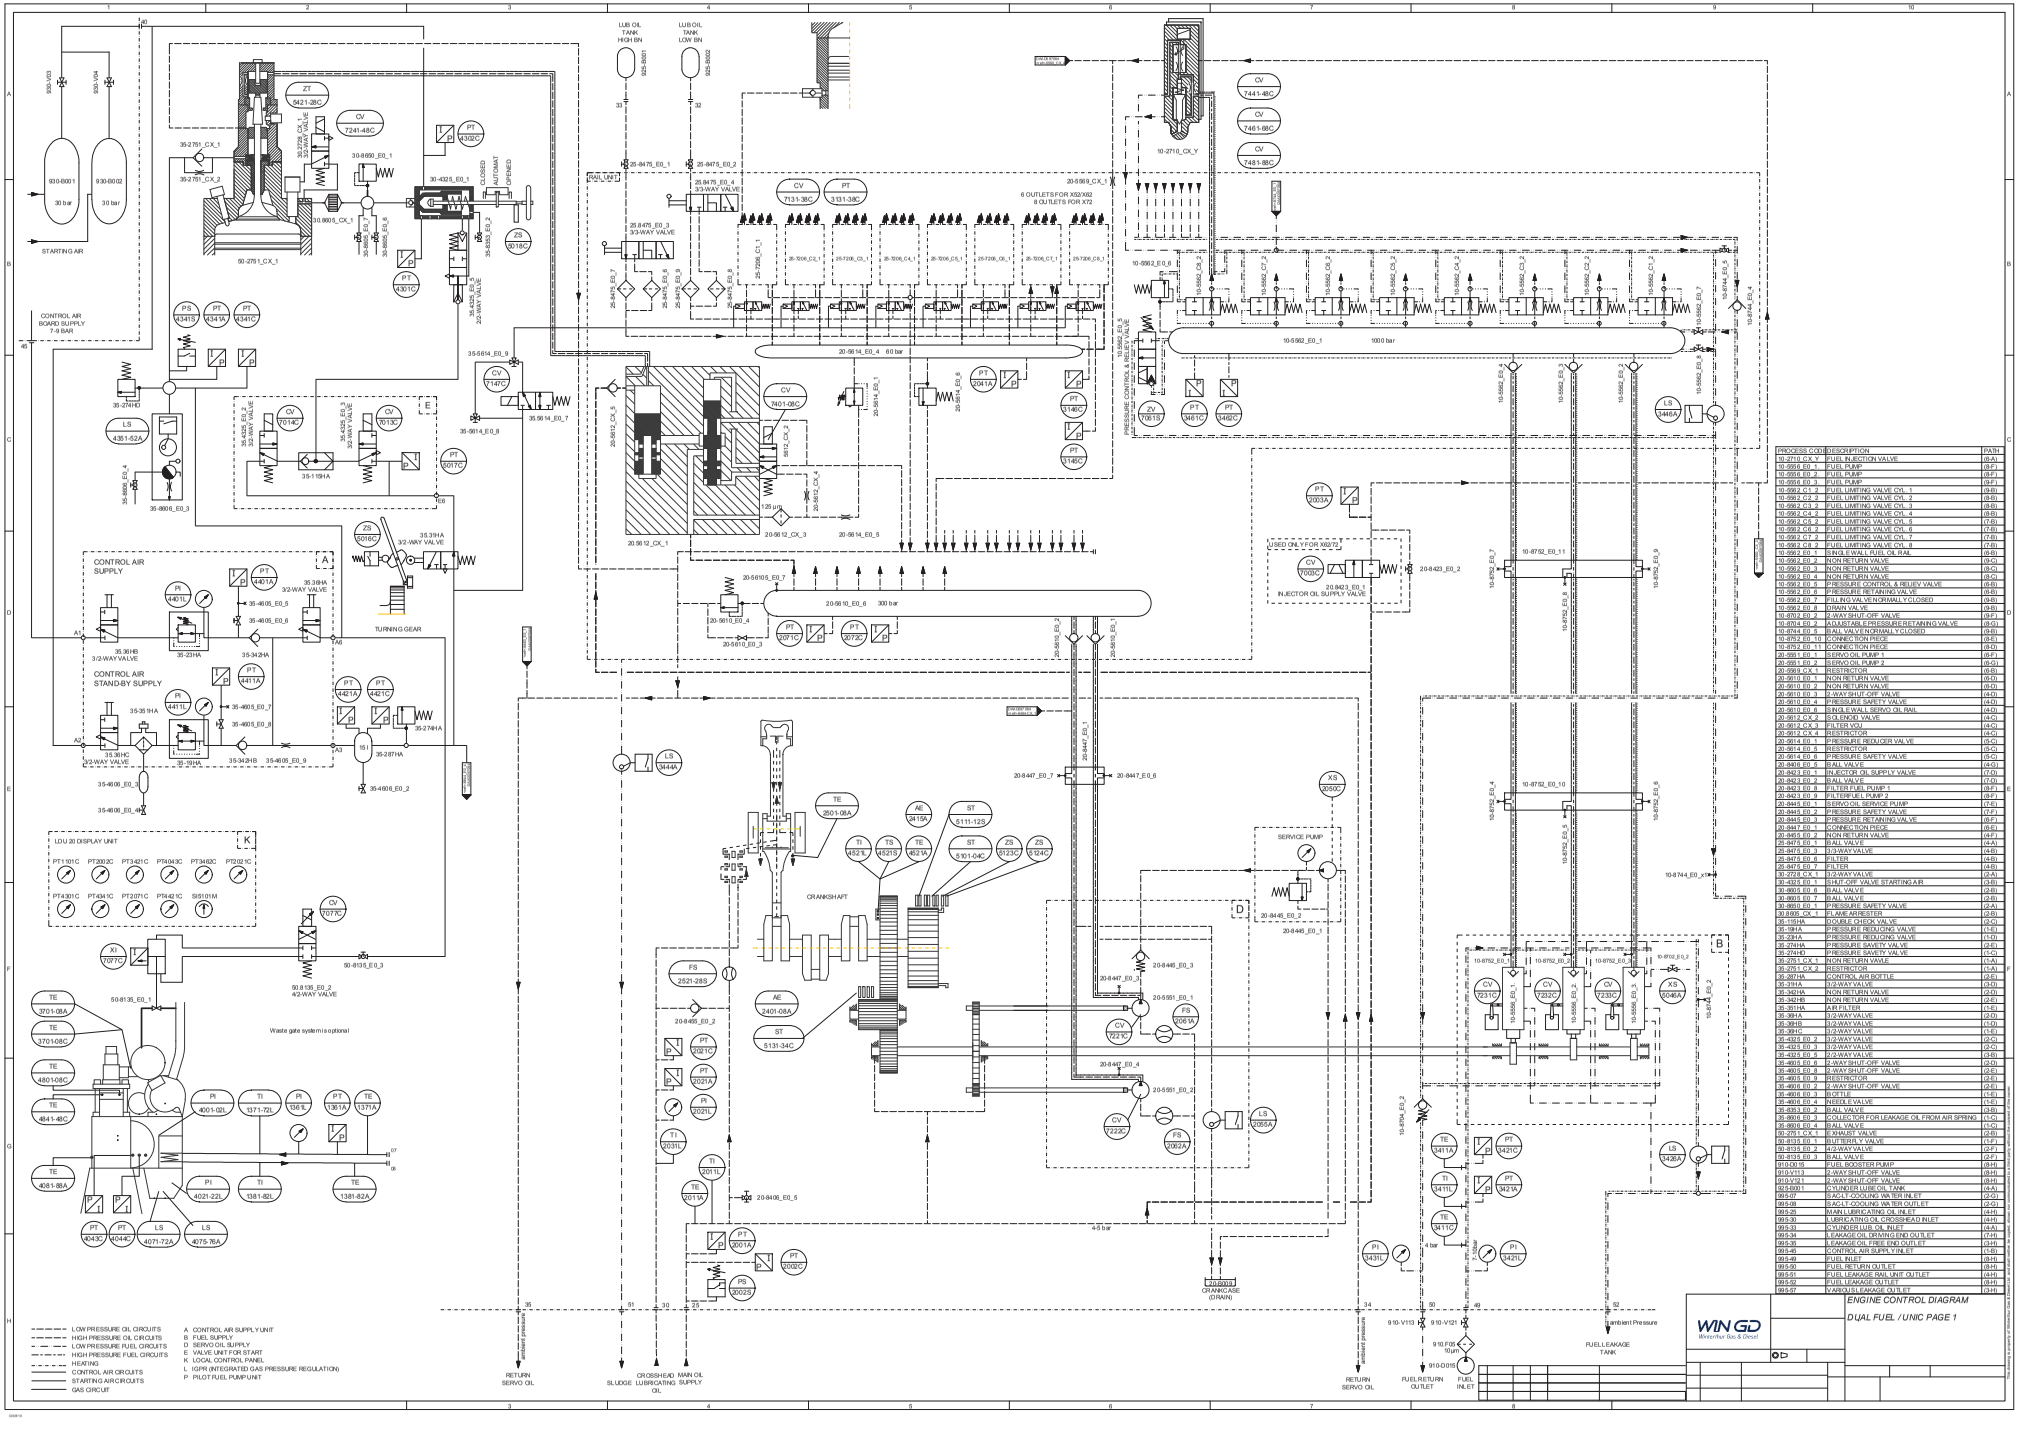

PROCESS CODE	DESCRIPTION	PATH
10-2710_CX_Y	FUEL INJECTION VALVE	(0-A)
10-5556_E0_1	FUEL PUMP	(0-F)
10-5556_E0_2	FUEL PUMP	(0-F)
10-5556_E0_3	FUEL PUMP	(0-F)
10-5562_C1_2	FUEL LIMITING VALVE CYL 1	(0-B)
10-5562_C2_2	FUEL LIMITING VALVE CYL 2	(0-B)
10-5562_C3_2	FUEL LIMITING VALVE CYL 3	(0-B)
10-5562_C4_2	FUEL LIMITING VALVE CYL 4	(0-B)
10-5562_C5_2	FUEL LIMITING VALVE CYL 5	(7-B)
10-5562_C6_2	FUEL LIMITING VALVE CYL 6	(7-B)
10-5562_C7_2	FUEL LIMITING VALVE CYL 7	(7-B)
10-5562_C8_2	FUEL LIMITING VALVE CYL 8	(7-B)
10-5562_E0_1	SINGLE WALL FUEL OIL RAIL	(0-B)
10-5562_E0_2	NON RETURN VALVE	(0-C)
10-5562_E0_3	NON RETURN VALVE	(0-C)
10-5562_E0_4	NON RETURN VALVE	(0-C)
10-5562_E0_5	PRESSURE CONTROL & RELIEV VALVE	(0-B)
10-5562_E0_6	PRESSURE RETAINING VALVE	(0-B)
10-5562_E0_7	FILLING VALVE NORMALLY CLOSED	(0-B)
10-5562_E0_8	DRAIN VALVE	(0-B)
10-8752_E0_2	2-WAY SHUT-OFF VALVE	(0-F)
10-8744_E0_2	ADJUSTABLE PRESSURE RETAINING VALVE	(0-G)
10-8744_E0_5	BALL VALVE NORMALLY CLOSED	(0-B)
10-8752_E0_10	CONNECTION PIECE	(0-E)
10-8752_E0_11	CONNECTION PIECE	(0-D)
20-5551_E0_1	SERVO OIL PUMP 1	(0-F)
20-5551_E0_2	SERVO OIL PUMP 2	(0-G)
20-0569_CX_1	RESTRICTOR	(0-B)
20-5610_E0_1	NON RETURN VALVE	(0-D)
20-5610_E0_2	NON RETURN VALVE	(0-D)
20-5610_E0_3	2-WAY SHUT-OFF VALVE	(4-D)
20-5610_E0_4	PRESSURE SAFETY VALVE	(4-D)
20-5610_E0_6	SINGLE WALL SERVO OIL RAIL	(4-D)
20-5612_CX_2	SOLENOID VALVE	(4-C)
20-5612_CX_3	FILTER VOJ	(4-C)
20-5612_CX_4	RESTRICTOR	(4-C)
20-5614_E0_1	PRESSURE REDUCER VALVE	(5-C)
20-5614_E0_5	RESTRICTOR	(5-C)
20-5614_E0_6	PRESSURE SAFETY VALVE	(5-C)
20-8416_E0_5	BALL VALVE	(4-G)
20-8423_E0_1	INJECTOR OIL SUPPLY VALVE	(7-D)
20-8423_E0_2	BALL VALVE	(7-D)
20-8423_E0_8	FILTER FUEL PUMP 1	(8-F)
20-8423_E0_9	FILTERFUEL PUMP 2	(8-F)
20-8445_E0_1	SERVO OIL SERVICE PUMP	(7-E)
20-8445_E0_2	PRESSURE SAFETY VALVE	(7-F)
20-8445_E0_3	PRESSURE RETAINING VALVE	(8-F)
20-8447_E0_1	CONNECTION PIECE	(8-D)
20-8455_E0_2	NON RETURN VALVE	(4-F)
20-8475_E0_1	BALL VALVE	(4-A)
20-8475_E0_3	3/3-WAY VALVE	(4-B)
20-8475_E0_6	FILTER	(4-B)
25-8475_E0_7	FILTER	(4-B)
30-2728_CX_1	3/2-WAY VALVE	(2-A)
30-4325_E0_1	SHUT-OFF VALVE STARTING AIR	(3-B)
30-4905_E0_6	BALL VALVE	(2-B)
30-4905_E0_7	BALL VALVE	(2-B)
30-8650_E0_1	PRESSURE SAFETY VALVE	(2-A)
30-8695_CX_1	FLAME ARRESTER	(2-D)
35-115HA	DOUBLE CHECK VALVE	(2-C)
35-19HA	PRESSURE REDUCING VALVE	(1-D)
35-23HA	PRESSURE REDUCING VALVE	(1-D)
35-27HA	PRESSURE SAFETY VALVE	(2-C)
35-27HD	PRESSURE SAFETY VALVE	(1-C)
35-2751_CX_1	NON RETURN VALVE	(1-A)
35-2751_CX_2	RESTRICTOR	(1-A)
35-287HA	CONTROL AIR BOTTLE	(2-E)
35-319HA	3/2-WAY VALVE	(3-D)
35-342HA	NON RETURN VALVE	(2-D)
35-342HB	NON RETURN VALVE	(2-D)
35-391HA	AIR FILTER	(1-E)
35-391HA	3/2-WAY VALVE	(2-D)
35-391HB	3/2-WAY VALVE	(1-D)
35-391HC	3/2-WAY VALVE	(1-E)
35-4325_E0_2	3/2-WAY VALVE	(2-C)
35-4325_E0_3	3/2-WAY VALVE	(2-C)
35-4325_E0_4	2/2-WAY VALVE	(3-B)
35-4905_E0_6	2-WAY SHUT-OFF VALVE	(2-D)
35-4905_E0_8	2-WAY SHUT-OFF VALVE	(2-D)
35-4905_E0_9	RESTRICTOR	(2-E)
35-4906_E0_2	2-WAY SHUT-OFF VALVE	(2-E)
35-4906_E0_3	BOTTLE	(1-E)
35-4906_E0_4	NEEDLE VALVE	(1-E)
35-5551_E0_2	BALL VALVE	(3-B)
35-8906_E0_3	COLLECTOR FOR LEAKAGE OIL FROM AIR SPRING	(1-C)
35-8910_E0_4	BALL VALVE	(3-C)
35-2751_CX_1	EXHAUST VALVE	(2-B)
50-8135_E0_1	BUTTERFLY VALVE	(2-F)
50-8135_E0_2	4/2-WAY VALVE	(2-F)
50-8135_E0_3	BALL VALVE	(2-F)
910-D0.9	FUEL BOOSTER PUMP	(8-H)
910-V113	2-WAY SHUT-OFF VALVE	(8-H)
910-V121	2-WAY SHUT-OFF VALVE	(8-H)
925-8001	CYLINDER LUBE OIL TANK	(4-A)
999-07	SAC-LT-COOLING WATER INLET	(2-G)
999-08	SAC-LT-COOLING WATER OUTLET	(2-G)
999-25	MAIN LUBRICATING OIL INLET	(4-H)
999-30	LUBRICATING OIL CROSSHEAD INLET	(4-H)
999-33	CYLINDER LUB. OIL INLET	(4-A)
999-34	LEAKAGE OIL DRIVING END OUTLET	(7-H)
999-35	LEAKAGE OIL FREE END OUTLET	(3-H)
999-45	CONTROL AIR SUPPLY INLET	(1-B)
999-49	FUEL INLET	(8-H)
999-50	FUEL RETURN OUTLET	(8-H)
999-51	FUEL LEAKAGE RAIL UNIT OUTLET	(4-H)
999-52	FUEL LEAKAGE OUTLET	(8-H)
999-57	V ARIOUS LEAKAGE OUTLET	(3-H)

ENGINE CONTROL DIAGRAM

DUAL FUEL / UNIC PAGE 1

WIN GD Winterthur Gas & Diesel